

# X-Server

```
sudo apt-get install xserver-xorg lxde xfonts-base (policykit-1) (xinit)
```

to install very basic xserver

log:

```
less /var/log/Xorg.0.log
```

list resolutions supported by fbdev:

```
cat /sys/class/graphics/fb0/modes
```

„no session for pid“ comes only up if xserver is started via startx. after install make a reboot the lightdm-login-form comes up and after login no error-message appears.

From:  
<http://www.fw-web.de/dokuwiki/> - **FW-WEB Wiki**



Permanent link:  
<http://www.fw-web.de/dokuwiki/doku.php?id=en:bpi-r2:x-server>

Last update: **2023/06/08 17:06**