


GPIO

Basics

<https://wiki.openwrt.org/doc/hardware/port/gpio>

 1)

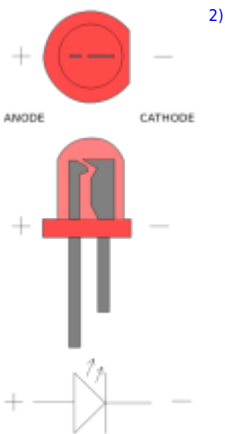

Pin define

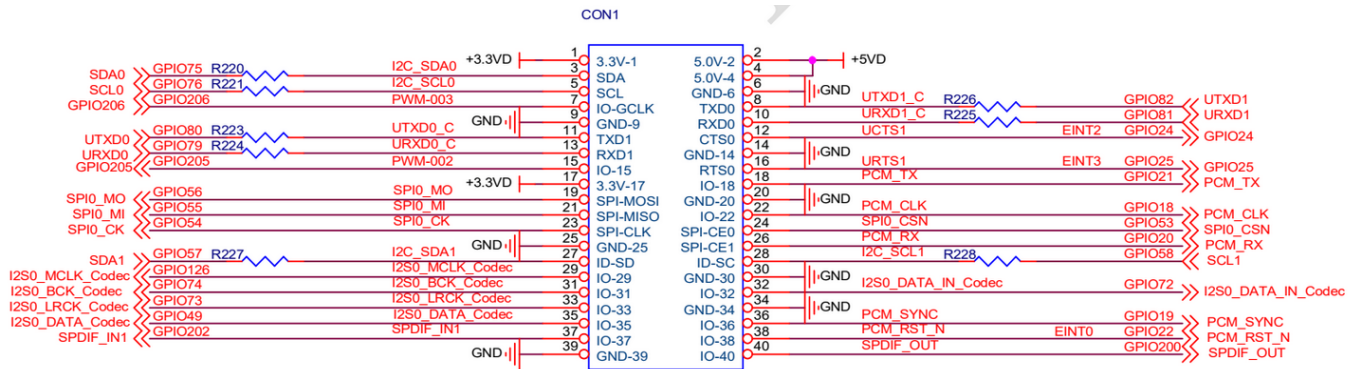










































image taken from bpi-r2 schematics

Sparefunction	Mainfunction	pin#	xxxxxxxxxxxxxxxxxxxxxx				pin#	Mainfunction	Sparefunction
-	3V3	1	1			2	2	5V	-
I2C_SDA0	GPIO 75	3	3			4	4	5V	-
I2C_SCL0	GPIO 76	5	5			6	6	GND	-
PWM3	GPIO 206	7	7			8	8	GPIO 82	UART1 TX
-	GND	9	9			10	10	GPIO 81	UART1 RX
UART0 TX	GPIO 80	11	11			12	12	UCTS1 / INT2	GPIO 24 (*)
UART0 RX	GPIO 79	13	13			14	14	GND	-
PWM2	GPIO 205	15	15			16	16	GPIO 25 / INT3	URTS1
-	3V3	17	17			18	18	GPIO 21	PCM_TX
SPI0_MO	GPIO 56	19	19			20	20	GND	-
SPI0_MI	GPIO 55	21	21			22	22	GPIO 18	PCM_CLK
SPI0_CK	GPIO 54	23	23			24	24	GPIO 53	SPI0_CSN
-	GND	25	25			26	26	GPIO 20	PCM_RX
I2C_SDA1	GPIO 57	27	27			28	28	GPIO 58	I2C_SCL1
	GPIO 126	29	29			30	30	GND	-
I2S0_BCK	GPIO 74	31	31			32	32	GPIO 72	I2S0_DATA_IN
I2S0_LRCK	GPIO 73 (?)	33	33			34	34	GND	-
I2S0_DATA	GPIO 49 (M)	35	35			36	36	GPIO 19	PCM_SYNC
SPDIF_IN1	GPIO 202	37	37			38	38	INT0	GPIO 22 (*) / PCM_RST_IN
-	GND	39	39			40	40	GPIO 200	SPDIF_OUT

	main	spare
Pin 1	3V3	-
Pin 2	5V	-
Pin 3	GPIO 75	I2C_SDA0
Pin 4	5V	-
Pin 5	GPIO 76	I2C_SCL0
Pin 6	GND	-
Pin 7	GPIO 206	PWM3
Pin 8	GPIO 82	UART1 TX
Pin 9	GND	-
Pin 10	GPIO 81	UART1 RX
Pin 11	GPIO 80	UART0 TX
Pin 12	Int2	GPIO 24 (*) / UCTS1
Pin 13	GPIO 79	UART0 RX
Pin 14	GND	-
Pin 15	GPIO 205	PWM2
Pin 16	GPIO 25 / Int3	URTS1

	main	spare
Pin 17	3V3	-
Pin 18	GPIO 21	PCM_TX
Pin 19	GPIO 56	SPI0_MO
Pin 20	GND	-
Pin 21	GPIO 55	SPI0_MI
Pin 22	GPIO 18	PCM_CLK
Pin 23	GPIO 54	SPI0_CK
Pin 24	GPIO 53	SPI0_CSN
Pin 25	GND	-
Pin 26	GPIO 20	PCM_RX
Pin 27	GPIO 57	I2C_SDA1
Pin 28	GPIO 58	I2C_SCL1
Pin 29	GPIO 126	
Pin 30	GND	-
Pin 31	GPIO 74	I2S0_BCK
Pin 32	GPIO 72	I2S0_DATA_IN
Pin 33	GPIO 73 (?)	I2S0_LRCK
Pin 34	GND	-
Pin 35	GPIO 49 (M)	I2S0_DATA
Pin 36	GPIO 19	PCM_SYNC
Pin 37	GPIO 202	SPDIF_IN1
Pin 38	INT0	GPIO 22 (*) / PCM_RST_IN
Pin 39	GND	-
Pin 40	GPIO 200	SPDIF_OUT

(*) special GPIO need memory-patch and mode-set in 4.4.70

(?) currently not working

(M) mode-setting needed

Kernel 4.4.70

Access standard GPIO

```
root@bpi-r2:~# GPIO=/sys/devices/platform/1000b000.pinctrl/mt_gpio
root@bpi-r2:~# echo "mode 25 0" >$GPIO #not needed for every GPIO
root@bpi-r2:~# echo "dir 25 1" >$GPIO
root@bpi-r2:~# echo "out 25 1" >$GPIO
```

works with LED on Pin 14 (-) and Pin 16 (+), incl. resistor (220 Ohm)

Access special GPIO

for the GPIOs 22/(23??)/24 it is necessary to set a register (siehe [issue#17](#) comment #15)

mwrite

```
root@bpi-r2:~# ./mwrite /dev/mem 0x10005b10 0x00000038
./mwrite offset : 10005b10, val : 00000038
b6f03b10
root@bpi-r2:~# GPIO=/sys/devices/platform/1000b000.pinctrl/mt_gpio
root@bpi-r2:~# echo "dir 24 1" >$GPIO
root@bpi-r2:~# echo "out 24 1" >$GPIO
root@bpi-r2:~# echo "mode 24 0" >$GPIO
```

for GPIO24 (pin 12) i have to set mode to 0

Kernel 4.14

GPIO_SYSFS and CONFIG_DEBUG_GPIO must be set in Kernel-Config (.config)

Access standard GPIO

```
root@bpi-r2# mount -t debugfs none /sys/kernel/debug
root@bpi-r2# cat /sys/kernel/debug/pinctrl/1000b000.pinctrl/gpio-ranges
GPIO ranges handled:
0: 1000b000.pinctrl GPIOs [232 - 511] PINS [0 - 279] #base=232, first value
of GPIOs
root@bpi-r2# GPIO_NO=$((232+25)) #base + number of gpio
root@bpi-r2# echo $GPIO_NO
257
root@bpi-r2# echo $GPIO_NO > /sys/class/gpio/export
```

Pin 14=GND/16=GPIO25 (+)

GPIO as Output

```
root@bpi-r2# echo out > /sys/class/gpio/gpio${GPIO_NO}/direction
root@bpi-r2# echo 1 > /sys/class/gpio/gpio${GPIO_NO}/value
root@bpi-r2# echo 0 > /sys/class/gpio/gpio${GPIO_NO}/value
```

used for LED+resistor (220 Ohm) on Pin 14=GND/16=GPIO25 (+)

GPIO as Input

now try with high-active button-circuit on GPIO 200 (pin 40 between button and resistor, using pin 39 as GND [resistor] and pin 17 as 3v3-vcc)

```
[10:54] root@bpi-r2:~# echo in > /sys/class/gpio/gpio${GPIO_NO}/direction
[10:56] root@bpi-r2:~# cat /sys/class/gpio/gpio${GPIO_NO}/value
```

```
0 #button not pressed
[10:56] root@bpi-r2:~# cat /sys/class/gpio/gpio${GPIO_NO}/value
1 #button pressed
[10:56] root@bpi-r2:~# cat /sys/class/gpio/gpio${GPIO_NO}/value
0 #button not pressed
#check every 1/4s
watch -n 0.25 cat /sys/class/gpio/gpio${GPIO_NO}/value
```

Special GPIO

memory-hack (like in 4.4.70) not needed

here example for GPIO24 (pin12):

```
root@bpi-r2# GPIO_NO=$((232+24))
root@bpi-r2# echo $GPIO_NO > /sys/class/gpio/export
root@bpi-r2# echo out > /sys/class/gpio/gpio${GPIO_NO}/direction
root@bpi-r2# echo 1 > /sys/class/gpio/gpio${GPIO_NO}/value
```

LED becomes on :)

on-board LEDs

on-board leds used here are near the power-socket (not next to gpio)

<http://forum.banana-pi.org/t/control-on-board-leds/4287/13>

on ⇒

```
echo 1 > /sys/class/leds/bpi-r2:isink:green/brightness
```

off ⇒

```
echo 0 > /sys/class/leds/bpi-r2:isink:green/brightness
```

blink (creates delay_on/off-nodes for frequency) ⇒

```
echo timer > /sys/class/leds/bpi-r2:isink:green/trigger
```

change blink frequency (on and off time in ms) ⇒

```
echo 100 > /sys/class/leds/bpi-r2:isink:green/delay_on
echo 100 > /sys/class/leds/bpi-r2:isink:green/delay_off
```

in my tests, green is blinking by default (red+blue are simply on/off), i don't know how to disable blinking of green led

```
L=/sys/class/leds/bpi-r2\:isink
```

```
echo 0 > $L:red/brightness      #goes off
echo 1 > $L:red/brightness      #goes on
echo 0 > $L:green/brightness    #goes off
echo 1 > $L:green/brightness    #starts blinking
```

UART

change DTS(i)

with Kernel 4.4.x the DeviceTree-sections are missing, these can be copied from a newer Kernel (dtsi). in the *bpi*.dts or *bananapi*.dts set state to enabled

definitions in the mt7623.dtsi:

<http://elixir.free-electrons.com/linux/v4.13-rc7/source/arch/arm/boot/dts/mt7623.dtsi>

now in bananapi.dts set „status=okay“ for your desired uart

notice that in mt7623.dtsi first must come uart2 then the others, else after uboot-message „Starting Kernel“ no more output is shown

Uart3 can be [routed to UCTS2/URTS2](#). These ports are next to Debug-UART-connector ([here](#))

port preferences

#show preferences of serial port (replace ttyS2 with your port or ttyUSB0 if a USB2serial-adapter is used):

```
stty -F /dev/ttyS2 -a
```

#set speed to 9600 baud, 8 bits, 1 stop bit, no parity:

```
stty -F /dev/ttyS2 9600 cs8 -cstopb -parenb
```

#deactivate processing (character conversion, linebreaks,...)

```
stty -F /dev/ttyS2 -opost
```

#raw Modus

```
stty -F /dev/ttyS2 raw
```

Usage

```
pin 8/10 = uart1 (tx/rx) = 11003000
pin 11/13 = uart0 (tx/rx) = 11002000
```

```
#!/bin/bash
```

```
DEV=/dev/ttyS2
```

```
#stty -F ${DEV} sane
```

```
#stty -F ${DEV} 9600 cs8 -cstopb -parenb -crtscts -echo
```

```
stty -F ${DEV} 9600 cs8 -cstopb -parenb raw -echo

dmesg | grep "ttyS.*MMIO" | sed 's/^\[.*\] \(\d*.*\) at.*$/\1/'


echo "11002000 = uart0 (tx/rx) = pin 11/13"
echo "11003000 = uart1 (tx/rx) = pin 8/10"

echo "using $DEV"
echo "send data using \"echo \"AT\" >$DEV\""

while read line; do
# if [[ -n "$line" ]]; then
    echo "["$(date "+%Y-%m-%d %H:%M:%S")"] received: "$line
# fi
done <<(cat $DEV)

echo "AT" >/dev/ttyS2
```

simple example for Arduino (Nano)

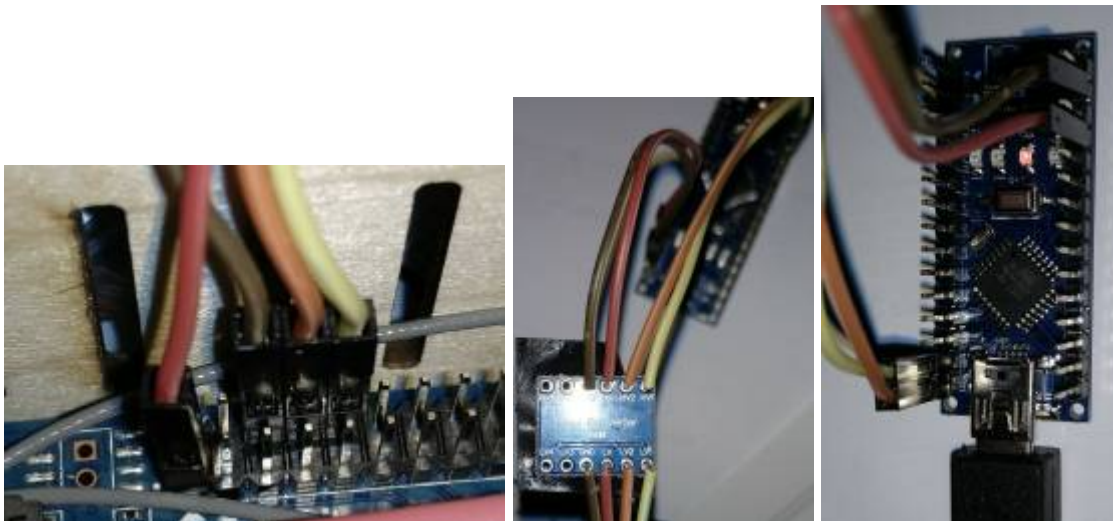

PI		Levelshifter		Arduino	
1 (3V3)	-----	LV	HV	-----	5V
6 (GND)	-----		GND	-----	GND
8 (TX)	-----	LV2	HV2	-----	RX
10 (RX)	-----	LV1	HV1	-----	TX

PWM

kernel-option PWM_MEDIATEK must be set (module possible), depends on PWM(=y)

using gpio 206 (pin 7) as pwm3

```
echo 3 >/sys/class/pwm/pwmchip0/export
echo 200000 >/sys/class/pwm/pwmchip0/pwm3/period
```

```
echo 1000000 >/sys/class/pwm/pwmchip0/pwm3/duty_cycle
echo 1 >/sys/class/pwm/pwmchip0/pwm3/enable
```

<https://www.kernel.org/doc/Documentation/pwm.txt>

period The total period of the PWM signal (read/write). Value is in nanoseconds and is the sum of the active and inactive time of the PWM.
duty_cycle The active time of the PWM signal (read/write). Value is in nanoseconds and must be less than the period.

```
period=2000000ns=200ms=5kHz
duty_cycle=1000000ns=1/2 period=50% high + 50% low Signal
```

currently output has the wrong frequency (1kHz instead of 5kHz) see [forum](#) and [issue](#)

2018-03-02: frequency is now right: [Commit in 4.14-main](#)

SPI

<http://forum.banana-pi.org/t/bpi-r2-spi-communication/4779/27>

I2C

[how to add a i2c RTC](#)

```
apt-get install i2c-tools
```

in ubuntu 18.4 you need to add universe to /etc/apt/sources.list

```
[17:13] root@bpi-r2:~# modprobe i2c-dev
[17:14] root@bpi-r2:~# i2cdetect -y 0
```

added an rtc ds1307 (with removed pullups) to i2c0 (I2C_SDA0=pin3, I2C_SCL0=pin5, 5V=pin4, GND=pin6)

```
#!/bin/bash
modprobe i2c-dev
modprobe rtc-ds1307
echo ds1307 0x68 > /sys/class/i2c-adapter/i2c-0/new_device
#cat /sys/class/i2c-dev/i2c-0/device/0-0068/rtc/rtc0/time
#read rtc
hwclock -r
#set system-clock to rtc-value
#hwclock -s
#set rtc to system-time
#hwclock -w
```


1Wire

thanks to user [phil from bpi-r2-forum](#)

To enable w1-gpio on GPIO 19 add the following to the main node of mt7623n-bananapi-bpi-r2.dts

```
w1 {
    pinctrl-names = "default";
    compatible = "w1-gpio";
    gpios = <&pio 19 0>;
    status = "okay";
};
```

dts for kernel 4.9 with 1wire-node

add settings to kernel config

```
CONFIG_W1=m
CONFIG_W1_MASTER_GPIO=m
CONFIG_W1_SLAVE_THERM=m
```

and recompile the kernel

Your devices should now show up at /sys/bus/w1/devices/

GPS-PPS

<http://mtnstormdaq.com/blog/2012/10/gps-pps-use-as-a-time-reference/>

[phil on bpi-r2-forum](#) got pps working with kernel 4.9

[HW-module](#)

adding this to main-section of mt7623n-bananapi-bpi-r2.dts:

```
pps {
    pinctrl-names = "default";
    compatible = "pps-gpio";
    gpios = <&pio 72 0>;
    status = "okay";
};
```

modified 4.9 dts

and add this options in the kernel-config for GPIO PPS support:

```
CONFIG_PPS=m
```

```
CONFIG_PPS_CLIENT_LDISC=m  
CONFIG_PPS_CLIENT_GPIO=m
```

thermal

not really gpio, but i wont spend an own page

```
cat /sys/class/thermal/thermal_zone0/temp
```

<http://forum.banana-pi.org/t/lm-sensors-support/4145/30>

1)

Quelle: wiki.openwrt.org

2)

Quelle: commons.wikimedia.org

From:

<https://fw-web.de/dokuwiki/> - **FW-WEB Wiki**

Permanent link:

<https://fw-web.de/dokuwiki/doku.php?id=en:bpi-r2:gpio&rev=1680959283>

Last update: **2023/06/08 17:06**

